



www.bimmanager.com

Keyboard

ShortCut	Function or Tool
AD	Attach Detail
AL	Align
AP	Add
AR	Array
CC	Copy
CG	Cancel
CM	Place a Component
CO	Copy
CS	Create Similar
DE	Delete
DI	Aligned
DL	Detail Line
DR	Door
EG	Edit Group
EH	Hide Elements
EL	Spot Elevation
ER	Editing Requests
EU	Unhide Element
EW	Edit Witness Lines
EX	Exclude
F7	Spelling
FG	Finish
GD	Graphic Display Options
GP	Create Model Group
GR	Grid
HC	Hide Category
HH	Hide Element
HI	
HL	Hidden Line
HR	Reset Temporary Hide/Isolate
IC	
LG	Link
LI	Line
LL	Level
LW	Linework
MA	Match Type
MD	Modify
MM	Mirror
MP	Move to project
MV	Move
OF	Offset
PG	Group Properties
PP	Pin
PR	Properties
PT	Paint
RA	Restore All Excluded
RB	Restore Excluded Member
RE	Scale
RG	Remove
RH	Toggle Reveal Hidden Elements Mode
RL	Reload Latest
RM	Room
RO	Rotate
RP	Draw Ref Plane
RR	Rendering Dialog
RT	TagRoom
RW	Reload Latest

Keyboard

ShortCut	Function or Tool
SA	Select All Instances
SC	Centers
SD	Shading with Edges
SE	Endpoints
SF	Split Face
SI	
SL	Split
SM	
SN	Nearest
SO	Snaps Off
SP	Perpendicular
SQ	Quadrants
SR	Snap to Remote Objects
SS	Turn Override Off
ST	Tangents
SU	Sun and Shadows Settings
SW	Work Plane Grid
SX	Points
SZ	Close
TG	Tag by Category
TL	Thin Lines
TR	Trim
TX	Text
UG	Ungroup
UN	Project Units
UP	Unpin
VG	Visibility/Graphics
VH	Hide By Category
VP	View Properties
VU	Unhide Category
VV	Visibility/Graphics
WA	Wall
WC	Cascade
WF	WireFrame
WN	Window
WT	Tile
ZA	Zoom All to Fit
ZC	Previous Pan/Zoom
ZE	Zoom to Fit
ZF	Zoom to Fit
ZO	Zoom Out(2x)
ZP	Previous Pan/Zoom
ZR	Zoom in Region
ZS	Zoom Sheet Size
ZV	Zoom Out(2x)
ZX	Zoom to Fit
ZZ	Zoom in Region